

Instruction for installation

Suitable gateway type (2 network port 4 serial port)

Model:BAC2004-ARM MOD2004-ARM HUB2004-ARM SNMP2004-ARM HMI2004-A9-GW
IEC2004-ARM C2M2004-ARM C2B2004-ARM BAC2004-LITE MOD2004-LITE

1.0 software configuration step (refer to the relevant configuration software operation manual)


please confirm the following:

- the configuration project is correct;
- upload engineering files to the gateway (note not download works)
- simulation test to collect data;

2.0 gateway graphic

Gateway size: 160mm x 116mm x 37mm(L * W * H) gateway weight: 500g

Gateway: (Guide Way & Wall-Hanging)

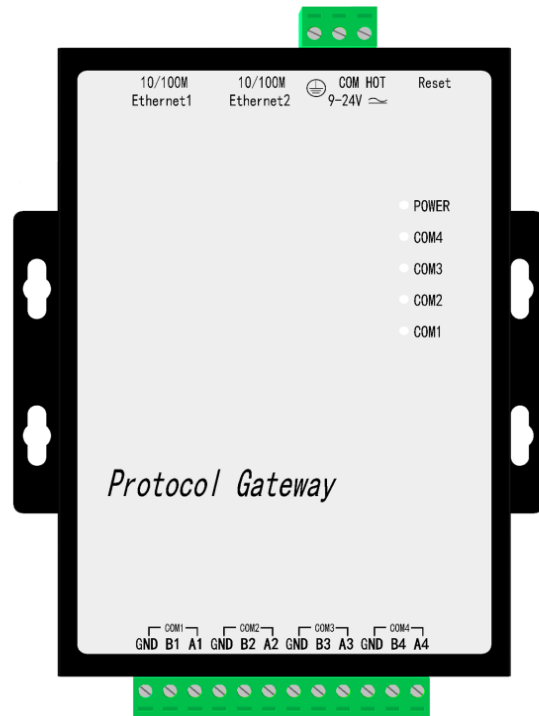

3.0 wiring description:

Power: AC/DC 9~24V (rated power 5 W);

Network port 1 (not to be used) : generally used as an external network or a cross-network segment to access third-party equipment. Default IP address: 172.24.13.88;

Network port 2 (must be used) : the user must use the network port, the IP address of the network port 2 is the IP address of the forwarding terminal, the default IP address is 192.168.1.88;

Note that network port 1 and network port 2 must not be set to the same network segment

Reset: when the user forgets the gateway IP address, the user can press the Reset button until the gateway "DiDiDi" and the IP address of Ethernet2 will return to the default IP address.

RS485 (COM1, COM2, COM3, COM4) :


A: positive pole. (+)

B: negative electrode. (-)

GND (ground wire)

4.0 login gateway Web server

The network line receives Ethernet2, the default IP address: 192.168.1.88 login user name: admin
password: admin123456

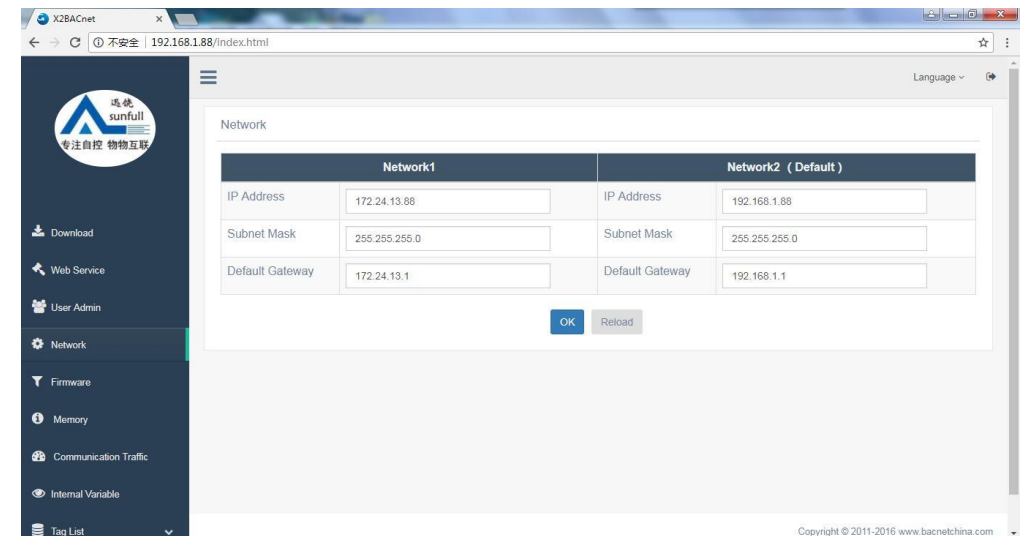

Note: You can download gateway configuration software after entering the web server, please refer to the PDF document under the Help folder for specific operation.

5.0 common problems

Q1: how to change the IP address of the gateway?

A1: gateway factory default IP address 192.168.1.88, subnet mask 255.255.255.0, default gateway 192.168.1.1.

Users to use for the first time with Ethernet cable between the gateway and connected directly with the computer and then change the IP address to the computer and the gateway within the same network segment (e.g., computer IP to 192.168.1.55), in the case of ping gateway IP address, open a browser and enter the gateway IP address 192.168.1.88, login gateway Web server, as shown above in the "front-end ports set" column set IP address.

Q2: what if the project files are saved in the computer?

A2: can be downloaded in the configuration software;Or login the gateway to the WEB page "download file" and click "project file" to download.

Q3: what is the difference between different models of the gateway hardware?

A3: the main models are as follows:

Model	Hardware Parameter	Interfaces	Supported Points	Supported Port
1002-LITE	CPU: 240MHz Memory: 32M	1 ethernet 2 serial ports	256	2 RS485 & 2 RS232
1002-ARM	CPU: 240MHz Memory: 32M	1 ethernet 2 serial ports	256	2 RS485 & 2 RS232
2004-LITE	CPU: 400MHz Memory: 64M	2 ethernet 4 serial ports	1024	4 RS485
2004-ARM	CPU: 400MHz Memory: 64M	2 ethernet 4 serial ports	1024	4 RS485
2004-A9	CPU: 1.4GMHz Memory: 512M	2 ethernet 4 serial ports	2048	4 RS485
1022-1U	CPU: 400MHz Memory: DDR2	1 ethernet 4 serial ports	1024	4 RS485

Sunfull Gateway model

BACnet Gateway: BAC1002-LITE (economical), BAC1002-ARM, BAC2004-LITE (economical), BAC2004-ARM, BAC2004-A9

Modbus Gateway: MOD1002-LITE (economical), MOD1002-ARM, MOD2004-LITE (economical), MOD2004- ARM, MOD2004-A9

Modbus Hub Gateway: HUB1002- ARM, HUB2004-ARM

SMS Alarm Gateway: HMI2004-A9-GPRS

SNMP Gateway: SNMP1002- ARM, SNMP2004-ARM

IEC104 Gateway: IEC 2004-ARM

WEB Configuration Gateway: HMI2004-A9-GW

Sunfull WEB Touch Panel series

Basic version: W7-1041

Gateway version: W7-1041-GW, W10-1041-GW, W15-1041-GW

Sunfull Software Gateway

OPC transfer BACnet: O2B- Softkey, O2B-USBkey

OPC transfer Modbus: O2M- Softkey, O2M-USBkey

OPC transfer Modbus- cloud: O2M-WEB- Softkey, O2M-WEB-USBkey

OPC transfer IEC104: O2I-Softkey、 O2I-USBkey

OPC transfer SMS: O2S-Softkey、 O2S-USBkey

OPC transfer Web: O2W-Softkey、 O2W-USBkey

OPC transfer SNMP: OtS-Softkey、 OtS-USBkey

Sunfull OPC server

OPC server: X2O- Softkey, X2O-USBkey

OPC server: OPCHub

Sunfull Free Software

BACnetScan scanning tool, MBUS scanning tool, Niagara interface, and WEBS interface

Welcome to follow Shanghai Sunfull's wechat public number : BACnet to know more new products and solutions.



Shanghai Sunfull Automation Co., LTD. TEL: +86-021-58776098

Address: A466, building 1, NO.2588, Jinhai Road, Pudong, Shanghai, China

Technical support E-mail: support@opcmaster.com

Technical support Tel: 021-20252795

Website 1: www.bacnetchina.com

SalesTel: 13564889340

Contacts: Linda Chen

Website 2: www.opcmaster.com